

StableWall Installation Instructions



Note: Please read this document before beginning installation.

If you are not confident with the processes involved, please hire a general contractor to install your wall padding according to these specifications.

Proper installation is a requirement of the StableWall warranty.

*Contact head office for more information at **888-337-6265**.*

Installation Instructions

YOU WILL NEED:


- Foam pads, cover and strips provided by Promat Inc.
- Fasteners for your system (not supplied), every 6-8 inches, based on stall wall material (wood, steel, concrete).
- Utility knife, drill for above fasteners, black caulking (optional).

WALL PREPARATION:


- Ensure the walls are clean before beginning the installation.
- If you have also purchased StableComfort™ The Ultimate in Stall Flooring, complete the installation of the flooring prior to installing StableWall. For more information on purchasing StableComfort™ to complement your StableWall product, please call 888-337-6265.
- For those with StableComfort™ already installed, note that the first strip in Step 1 should be placed immediately on top of the flooring fastening strip. Each strip is 2", so you will have 4" of fastening strips along each wall.

STEP 1: Fastening the ground strip

- Choose one wall to start with, and place the cover on the wall. While holding the cover on the wall keeping the edge of the cover level with the bottom of the stall, fasten the ground strip the entire length of the wall.

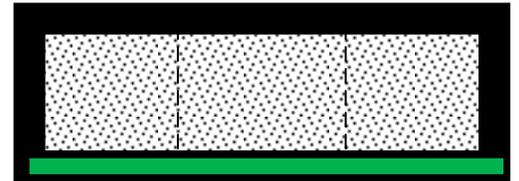


OVERVIEW: For best overall function and appearance, fasten the first screw exactly halfway up the strip, close to the far edge of the strip. Next, fasten the top row of screws approximately 12" apart, followed by the bottom row of screws approximately 12" apart, staggered with the top row. Finish the strip by fastening the final screw exactly halfway up the strip, close to the far edge.

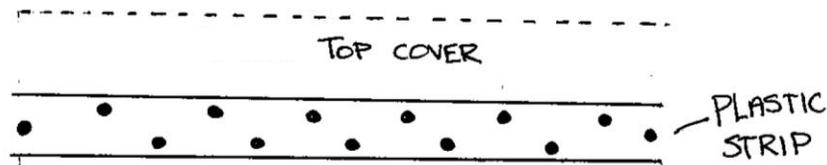

STEP 2: Tack pads to the wall


- Using construction glue, or temporary screws with large washers, tack the StableWall pads to the wall. If you use anything such as screws or nails that may puncture the StableWall cover, these fasteners MUST be removed during Step 4. Damage from these screws or nails is NOT covered by the StableWall warranty.

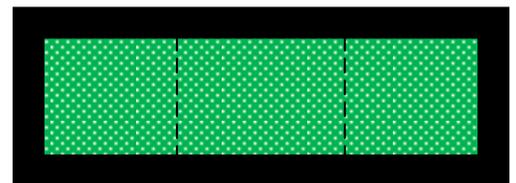

NOTE: You have received either a single layer of pads or a double layer of pads; and you will have received either a 46" high system or 60" high system. If you are unsure of the layout your order, please contact your dealer or StableComfort™/StableWall head office at 888-337-6265.


STEP 3: Fastening the left vertical strip

- Bring the cover over the wall pads, keeping the cover tight over the pads. Fasten the left vertical strip the entire height of the wall immediately to the left of the first pad.
- Keeping the cover tight will ensure longevity of the product.

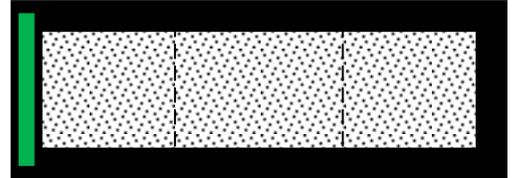

STEP 4: Fastening the top strip

- Keeping the cover tight over the wall pads, fasten the top strip the entire length of the wall immediately above the pads.
- Remember, if you used screws or nails to temporarily tack the pads to the wall, you MUST remove these as you fasten the top strip. Anything that may puncture the top cover over time must be removed during this step. Damage from the failure to remove these fasteners is NOT covered by the StableWall warranty.

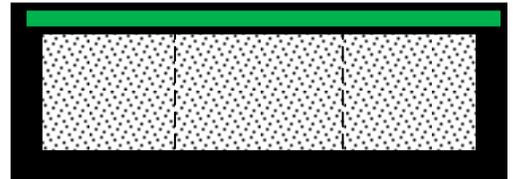

STEP 5: Fastening the right vertical strip

- Keeping the cover tight over the wall pads, fasten the right vertical strip the entire height of the wall immediately to the right of the pads.
- Keeping the cover tight will ensure longevity of the product.



Repeat Steps 1-5 above for each section of wall.

StableWall Best Practices: A Finishing Touch

- *To promote the 100% waterproof characteristic of the StableWall system, it is a common practice to line the top of the fabric cover/plastic strip along each wall with a bead of black caulking or similar product. This will ensure the edge of the cover along the wall is also waterproof, similar to the entire surface of the top cover.*